

- # Basic 1
- # Advanced 1
- # Setup & Monitor 2
- # Trace 3
- # Tool 3
- # IO 4

ComiIDE

Basic



Home Return



SingleAxis



MultiAxis



IxLine



IxArc



IxSpline



IxHelical

+



PT Motion

-



IxMprLin2x



IxVia

,



Master-Slave

Advanced



ListMotion



CMP



CMP AB



Velocity / Torque

,



Auto Torque



Multi Torque



Gantry

1



2D Position Correction

2



Collision Avoidance



LATCH



External Switch



Manual Pulsar

MPG

PA/PB



Dispensor

AD Library

Dispensor



Motion Path

,

GUI



Sync Axis



Slow Down



Ext Stop



TouchProbe

()

Setup & Monitor



Motion Setup



HomingSpeed



SxSpeed



IxSpeed



Version Compare

1)



Motor Monitor



Position Monitor



MIO Monitor

NOT,POT,ALM MotionIO



AI Monitor

EtherCAT AIState, CRC

Trace



DLL Trace

API trace



State Trace

, , , MotorState trace



3D Emulator

3 trace



Graph

, , trace



Interrupt Trace

trace



Register Trace

trace



Motor Performance Trace

, trace

Tool



Shell

Shell Api , , logging



Install (Installer)

Driver, Library



DLLs (Dll finder)

Load DLL



PC (PC Monitor)

PC, Threshold



M.Edit : Motion Editor

Shell Task Motion



Servo : ServoTunes



FW (Firmware Downloader)

Firmware Download, Updaloading, Compare



Config

EtherCAT Configurator



SlaveRW

EtherCAT Slave SDO, Register, EEPROM Read, Writer, Update



Alarm History

EtherCAT Driver Alarm



PDO (PDO Editor)

EtherCAT Driver Config PDO Data Read / Write

IO



Digital Input



Digital Output



Analog Input



Analog Output



Counter



Serial



Custom DI

DI channel



Custom DO

DI channel

1)

Firmware, Driver(WDM), Library(DLL)

From:

<http://comizoa.com/info/> - -

Permanent link:

http://comizoa.com/info/doku.php?id=application:comiide:20_intro:20_ide_feature&rev=1558959261Last update: **2024/07/08 18:23**