

- # Basic 1
- # Advanced 1
- # Setup & Monitor 2
- # Trace 3
- # Tool 3
- # IO 4

ComiIDE

Basic



Home Return



SingleAxis



MultiAxis



IxLine



IxArc



IxSpline



IxHelical

+



PT Motion

-



IxMprLin2x



IxVia



Master-Slave

Advanced



ListMotion



CMP



CMP AB



Velocity / Torque



Auto Torque



Multi Torque



Gantry

1



2D Position Correction

2



Collision Avoidance



LATCH



External Switch



Manual Pulsar

MPG

PA/PB



Dispensor

AD Library

Dispensor



Motion Path

GUI



Sync Axis



Slow Down



Ext Stop



TouchProbe

()

Setup & Monitor



Motion Setup



HomingSpeed

 **SxSpeed**

 **IxSpeed**

 **Version Compare**
1)

 **Motor Monitor**


 **Position Monitor**

 **MIO Monitor**
NOT,POT,ALM MotionIO

 **AIMonitor**
EtherCAT AIState, CRC

Trace

 **DLL Trace**
API trace

 **State Trace**
, , , MotorState trace

 **3D Emulator**
3 trace

 **Graph**
, , trace

 **Interrupt Trace**
trace

 **Register Trace**
trace

 **Motor Performance Trace**
, trace

Tool

 **Shell**
Shell Api , , logging



Install (Installer)

Driver, Library



DLLs (DLL finder)

Load DLL



PC (PC Monitor)

PC, Threshold



M.Edit : Motion Editor

Shell Task Motion



Servo : ServoTunes



FW (Firmware Downloader)

Firmware Download, Updaload, Compare



Config

EtherCAT Configurator



SlaveRW

EtherCAT Slave SDO, Register, EEPROM Read, Writer, Update



Alarm History

EtherCAT Driver Alarm



PDO (PDO Editor)

EtherCAT Driver Config PDO Data Read / Write

IO



Digital Input



Digital Output



Analog Input



Analog Output



Counter



Serial



Custom DI

DI channel

**Custom DO**

DI

channel

1)

Firmware, Driver(WDM), Library(DLL)

From:

<http://comizoa.com/info/> - -

Permanent link:

http://comizoa.com/info/doku.php?id=application:comiide:20_intro:20_ide_feature&rev=1565792571Last update: **2024/07/08 18:23**