

AI State .....	1
CRC Error .....	2


# AI Monitor

x EtherCAT  
AI State

AI-State CRC Error  
**AI State**

AI Monitor

## AI State

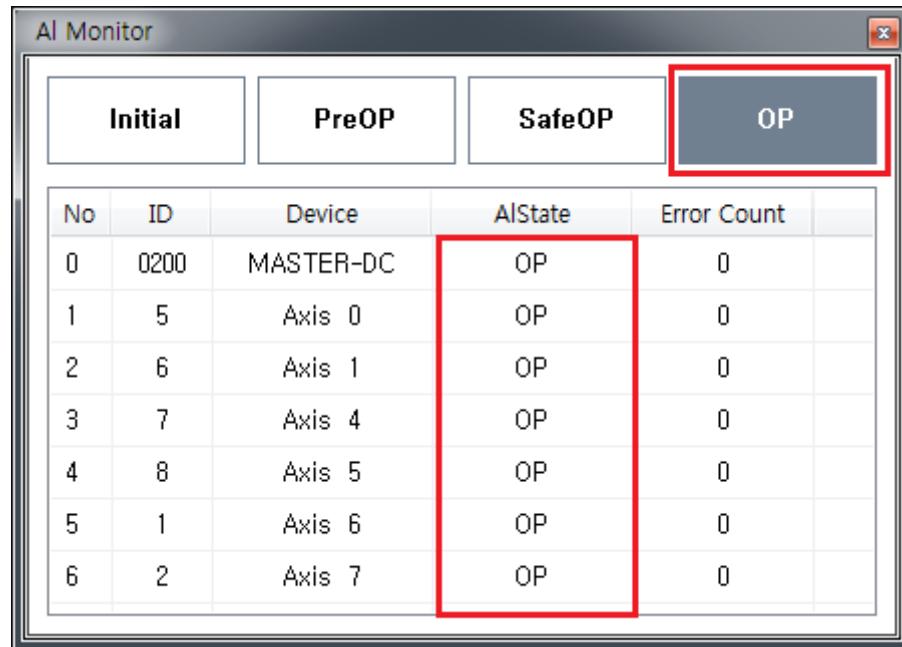


No	ID	Device	AIState	Error Count
0	0200	MASTER-DC	OP	0
1	5	Axis 0	OP	0
2	6	Axis 1	OP	0
3	7	Axis 4	OP	0
4	8	Axis 5	OP	0
5	1	Axis 6	OP	0
6	2	Axis 7	OP	0

• AI Monitor <sup>1)</sup>

AI State

AI State

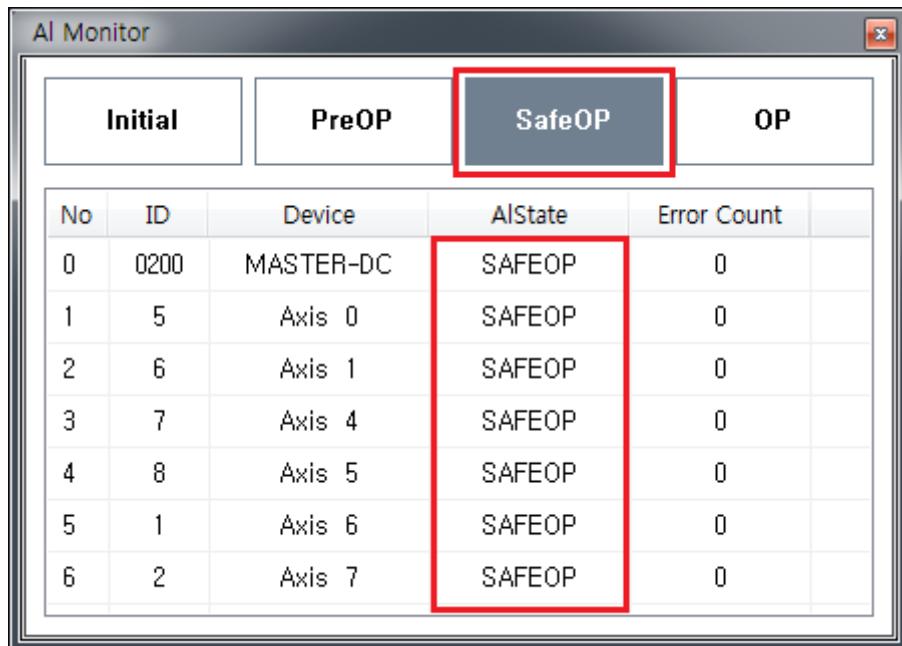


No	ID	Device	AIState	Error Count
0	0200	MASTER-DC	SAFEOP	0
1	5	Axis 0	SAFEOP	0
2	6	Axis 1	SAFEOP	0
3	7	Axis 4	SAFEOP	0
4	8	Axis 5	SAFEOP	0
5	1	Axis 6	SAFEOP	0
6	2	Axis 7	SAFEOP	0

- AI State
  - AI State 가
  - **SafeOP** 가

## CRC Error

- CRC Error 가 “Error Count”

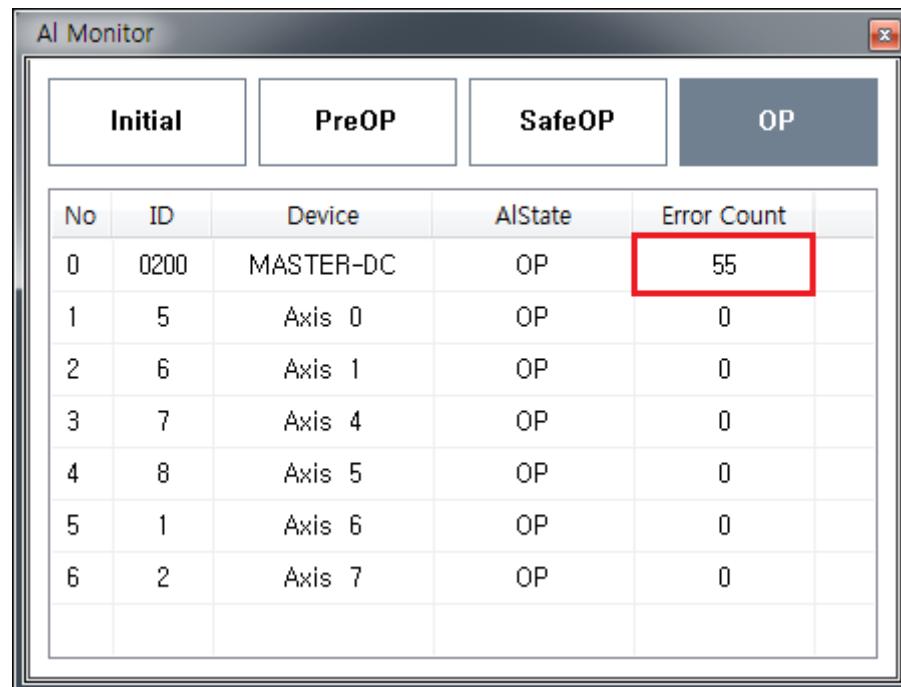

No	ID	Device	AIState	Error Count
0	0200	MASTER-DC	OP	55
1	5	Axis 0	OP	0
2	6	Axis 1	OP	0
3	7	Axis 4	OP	0
4	8	Axis 5	OP	0
5	1	Axis 6	OP	0
6	2	Axis 7	OP	0

- AI State 가 OP
  - 가
- MASTER-DC Error Count , ErrorCount 가

1)

View      Monitor      **AI Monitor**

From:  
<http://comizoa.com/info/> - -

Permanent link:  
<http://comizoa.com/info/doku.php?id=application:comiide:monitor:almonitor&rev=1547178552>

Last update: **2024/07/08 18:23**