

1. Configurator	Download	1
2. Slave EEPROM, Register	2

1. Configurator

Download

SetupMainAddressConfig

ScanScanErrorDownloadUploadSaveLoadCompareNet 0Net 1TopologyNetInfoSlaveInfoProcessData

• Configurator

Slave Info

Property FMMU / SM

ETS

ProductETS-A0402MV-EProductCode0x5032D406VendorCOMIZOAVendorID0xAAAAAAAARevisionNo0x16102400

Address

AddressMode AALIASAlias580AliasILMode BIdentificationADOAutoAddress-6PhysAddr_Hex C0244

Info

Physics TypeVYSyncMode DFreeRUN

Support

IsAoEFalseIsCoETrueIsFoETrueIsMbxTrue

Type

DeviceType_401 EAI, A0ProfileNo401SubProfileNo12

AddressMode

☐ Apply All

• PhysAddr_Hex

Address

Configurator

Setup

Main

Address

Config

Scan

ScanError

Download

Upload

Save

Load

Compare

Net 0

Net 1

Topology

NetInfo

SlaveInfo

ProcessData

- Download

2. Slave EEPROM, Register

Setup

Main

Motion View

Motion Control I

Motion Control II

IO

Custom IO

Style

Scan

Save

Load

Update

FW

Install

DLLs

PCM

Shell

Scripter

Servo

FW

Config

Slaves

Alarm.H

PDO

Dictionary

ESC

DSP

Project

Reset

Tool

Tool II

Tool EtherCAT

Slave RW

00 : [02FF] MASTER-DC

EtherCAT

Net 0

00 : [02FF] MASTER-DC

01 : [0200] AES-CBC-DIO

02 : [0201] AES-CBC-AIO

EEPROM

CoE SDO

Register

Update

Address

Size

Value

Decimal

0x4

2

0x2FF

767

Index Order

ID Order

RenewCRC

Read

Write

1. Slave

2. EEPROM 0x4

3. Renew CRC

4.

Slave

Write

Slave RW

00 : [02FF] MASTER-DC

EtherCAT

Net 0

- 00 : [02FF] MASTER-DC
- 01 : [0200] AES-CBC-DIO
- 02 : [0201] AES-CBC-AIO

EEPROM

CoE SDO

Register

Update

Register

Size

Value

Decimal

0x12

2

0x2FF

767

Index Order

ID Order

Read

Write

- Register 0x12 Read 가

From:
<http://comizoa.com/info/> - -

Permanent link:
http://comizoa.com/info/doku.php?id=faq:downloadandsetup:ethercat:05_slave_address_set&rev=1654771328

Last update: 2024/07/08 18:22