

..... 1
..... 1
..... 1

B

x B

-
-

B

-
-

B
EL

A

A

- SW
- ComiDE

B
Setup¹⁾

2)

가

1)



2)

The screenshot shows the AxisList software interface. At the top, there are four buttons labeled 0*, 1, 2, and 3. Below them is a 'Setup' window for Axis 0. The setup window contains a table of parameters:

	Axis 0	Multi Select
Pulse Output Mode	4 : CW & CCW	1
Encoder Input Mode	0 : 1x A/B Phase	
Feedback Inverse	Disable	
In/Out Ratio	1	
Signal 1		
Alarm Logic	LogicA	
Alarm Mode	Immediate_Stop	
EL Logic	LogicA	
Inposition Logic	LogicA	
Origin Logic	LogicA	
EL Stop Mode	Immediate_Stop	
Inposition Enable	Disable	
Signal 2		

The 'Signal 1' section is highlighted with a red box. Below the table, a section titled 'Feedback Speed Check' contains the text: '실제 모션의 속도를 확인하는 기능 사용 여부를 설정합니다.' (Set whether to use the function to check the actual motion speed). To the right of the setup window is a 'Sx Speed' panel with fields for Speed Mode, Work Speed, Acceleration, Deceleration, Initial Speed, Max Speed, and Min Speed, each with a corresponding slider.

From:

<http://comizoa.com/info/> --

Permanent link:

http://comizoa.com/info/doku.php?id=faq:motion:common:12_el_setting&rev=1624507298

Last update: **2024/07/08 18:22**