

Slave Info 1


..... 1

..... 1

Property 2

Slave Info

× Configurator Slave Information Tab
Address, SyncMode, DeviceType

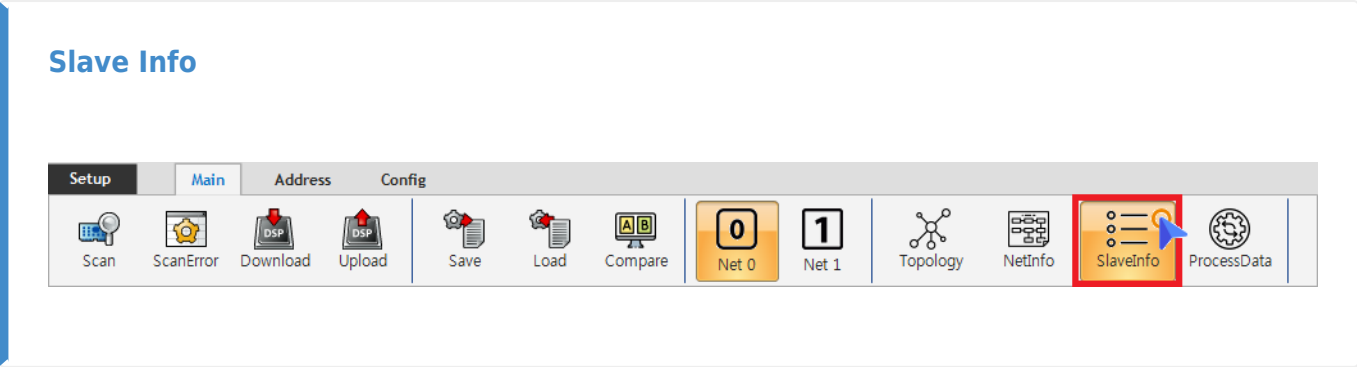


- SlaveInfo

- ESI Slave
- Address
- SyncMode



Property FMMU / SM



Product	ETS-A0402MV-E	ProductCode	0x5032D406
Vendor	COMIZOA	VendorID	0xAAAAAAAA
Group	ETS	RevisionNo	0x16102400

Address

AddressMode	A	ALIAS
Alias		580
AliasILMode	B	IdentificationADO
AutoAddress		-6
PhysAddr_Hex	C	0244

Info

PhysicsType		VV
SyncMode	D	FreeRUN

Support

IsAoE		False
IsCoE		True
IsFoE		True
IsMbx		True

Type

DeviceType_401	E	AI, A0
ProfileNo		401
SubProfileNo		12

AddressMode

☐ Apply All

1 - Info

- Slave Type .

2 - Property

- Slave .
- (default) ESI .
- 가 .

3 - Apply All

- , Type Slave .
- VendorID ProductCode가 Type .

Property

AddressMode

- ALIAS : Master가 Slave Address
◦ Slave
◦ 가 OP Mode 가
- CSA : ALIAS Slave

AliasILMode

- IdentificationADO : Slave ESC Memory
- IdentificationReg134 : Slave
◦ MicroController ID Switch가

PhysAddr_Hex

- 16 Address
- 402 Profile(Driver) IO **BaseAddress**

× Address가 Download Slave

SyncMode

- xml xml mode
- xml 가 , , FreeRUN
-

From:
<http://comizoa.com/info/> - -

Permanent link:
http://comizoa.com/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:30_slaveinfo&rev=1586446094

Last update: 2024/07/08 18:22