


Slave Info ..... 1  
..... 1  
Address Setup ..... 2  
Property ..... 3  
FMMU / SM ..... 4

# Slave Info

× Configurator Slave Information Tab  
Address, SyncMode, DeviceType

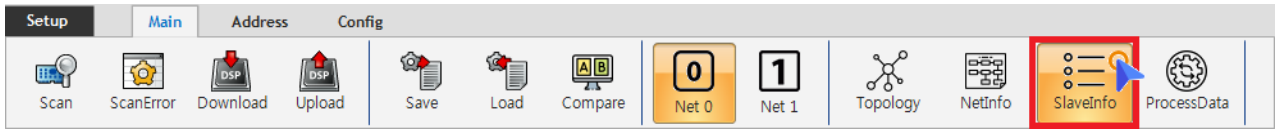

- SlaveInfo

- ESI Slave

- Address

- SyncMode

Property **FMMU / SM**



<b>Product</b>	ETS-A0402MV-E	<b>ProductCode</b>	0x5032D406
<b>Vendor</b>	COMIZOA	<b>VendorID</b>	0xAAAAAAAA
<b>Group</b>	ETS	<b>RevisionNo</b>	0x16102400

<b>Address</b>	
AddressMode <b>A</b>	<b>ALIAS</b>
Alias	580
AliasLMode <b>B</b>	<b>IdentificationADO</b>
AutoAddress	-6
PhysAddr_Hex <b>C</b>	<b>0244</b>
<b>Info</b>	
PhysicsType	YY
SyncMode <b>D</b>	<b>FreeRUN</b>
<b>Support</b>	
IsAoE	False
IsCoE	True
IsFoE	True
IsMbx	True
<b>Type</b>	
DeviceType_401 <b>E</b>	<b>AI, A0</b>
ProfileNo	401
SubProfileNo	12

Apply All **3**

### 1 - Info

- Slave Type

### 2 - Property

- Slave
- (default) ESI
- 가

### 3 - Apply All

- , Type Slave
- VendorID ProductCode가 Type

## Address Setup

**A - AddressMode**

- ALIAS : Master가 Slave Address
  - Slave
  - 가 OP Mode 가
- CSA : ALIAS Slave

**B - AliasILMode**

- IdentificationADO : Slave ESC Memory
- IdentificationReg134 : Slave
  - MicroController ID Switch가

**C - PhysAddr\_Hex**

- 16 Address
- 402 Profile(Driver) IO **BaseAddress**

x Address가 Download Slave

**Property**

**D - SyncMode**

- xml xml mode
- xml 가 , FreeRUN

**E - DeviceType\_401**

- DeviceType 401

Property **FMMU / SM**

	<b>Product</b>	ETS-A0402MV-E	<b>ProductCode</b>	0x5032D406
	<b>Vendor</b>	COMIZOA	<b>VendorID</b>	0xAAAAAAAA
	<b>Group</b>	ETS	<b>RevisionNo</b>	0x16102400

<b>Address</b>	
AddressMode	<b>ALIAS</b>
Alias	580
AliasILMode	<b>IdentificationADO</b>
AutoAddress	-6
PhysAddr_Hex	<b>0244</b>
<b>Info</b>	
PhysicsType	YY
SyncMode	<b>FreeRUN</b>
<b>Support</b>	
IsAoE	False
IsCoE	True
IsFoE	True
IsMbx	True
<b>Type</b>	
DeviceType_401	<b>AI, AO</b>
ProfileNo	
SubProfileNo	

**Device Type\_401**

Apply All

- DeviceType ,
- "DI Info" Type , DI
  - DO DeviceID PDO

### FMMU / SM

Property: FMMU / SM

FMMU

L Start	Length	L EndBit	P Start	Type	Activate	SM
4	4	7	0x1100	OUT	1	2
8	16	7	0x1180	IN	1	3

SM

Start	Length	ActByte	Buffer	Access	IntToECAT	IntToPDI	WDTrigger	Enable
0x1000	128	0001	1	1	0	0	1	0
0x1080	128	0001	1	0	0	0	1	0
0x1100	4	0001	0	1	0	0	1	1
0x1180	16	0001	0	0	0	0	1	1

FMMU

- Slave **FMMU**

SM

- Slave **SyncManager**

From: <http://comizoa.com/info/> - -

Permanent link: [http://comizoa.com/info/doku.php?id=platform:ethercat:1\\_setup:10\\_config:20\\_desc:30\\_slaveinfo&rev=1592285920](http://comizoa.com/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:30_slaveinfo&rev=1592285920)

Last update: **2024/07/08 18:22**