


Addressing 1
Index 1
Address 2
Custom 2
Auto 4

Addressing

x Slave Mapping




- Index : Mapping
- Address : Mapping
- Custom : User Define Mapping
- Auto : Device Type

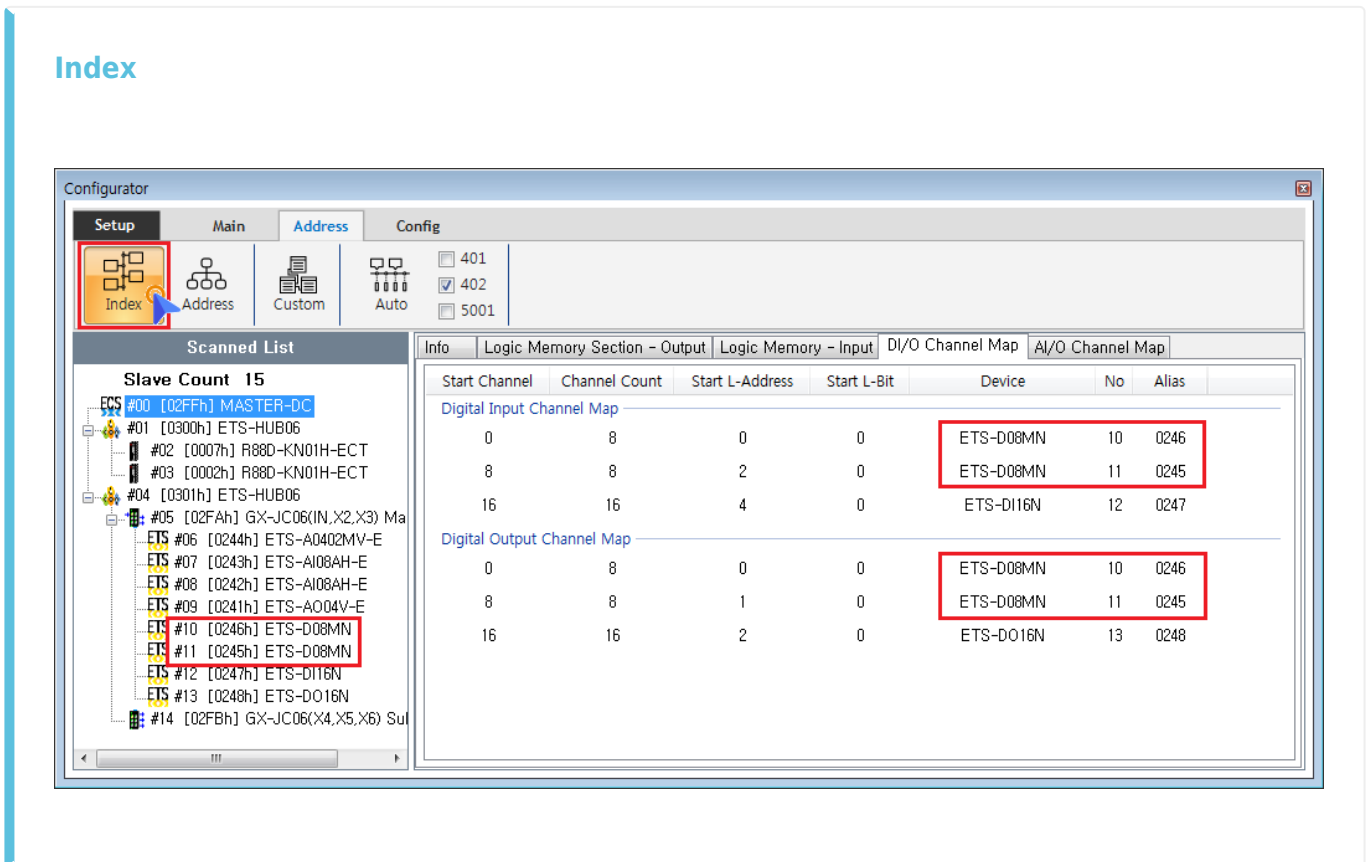

- Index 가
- IO ,

- 10 ETS-D08MN (0x246) 0 ~ 7 Global Channel
- 11 ETS-D08MN (0x245) 8 ~ 15 Global Channel

Address

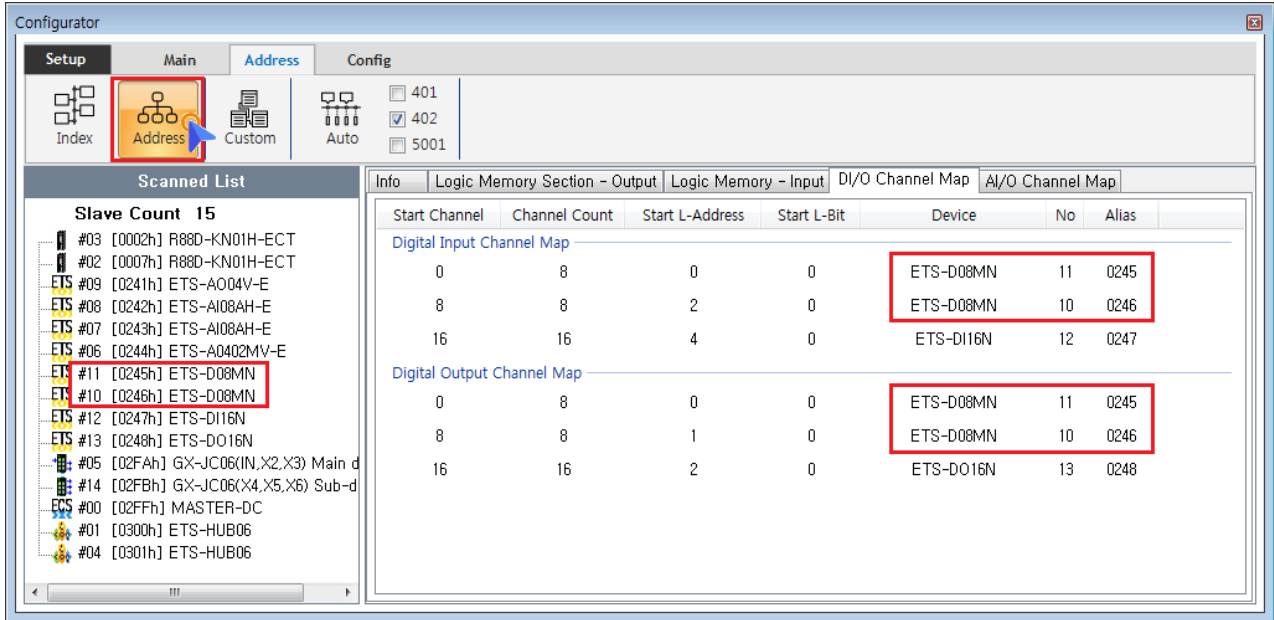

• **Address**

가

• IO


- 0x245 가 ETS-D08MN 0 ~ 7 Global Channel
- 0x246 가 ETS-D08MN 8 ~ 15 Global Channel

Custom




• **Custom**


User Defined Map

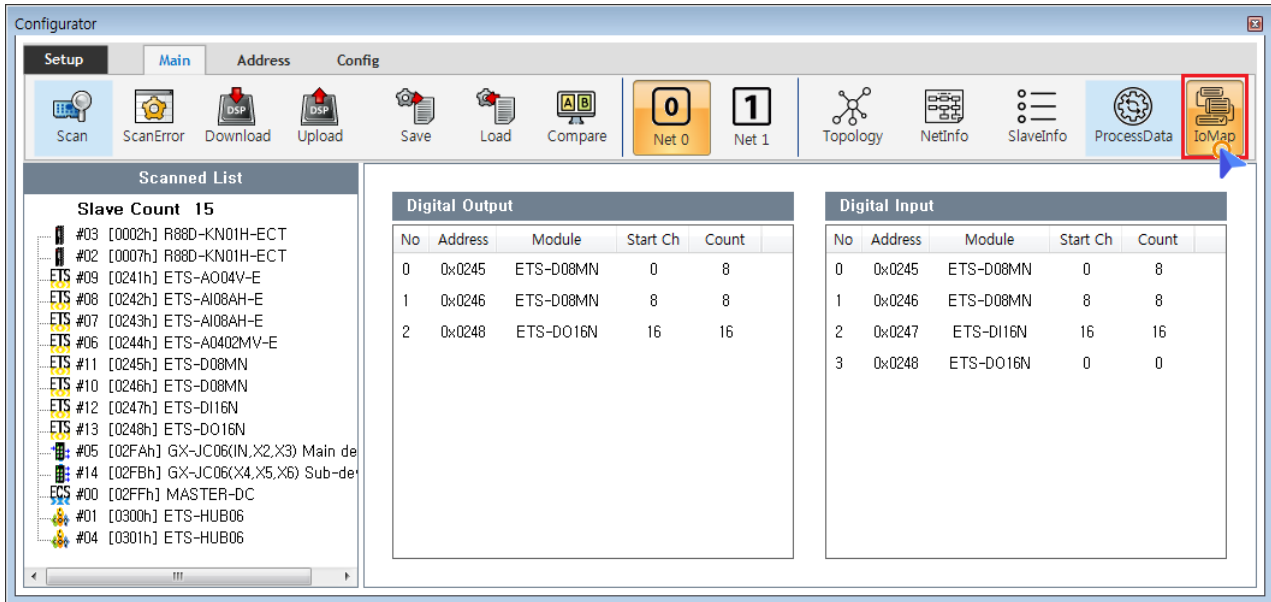


• Custom Main IoMap

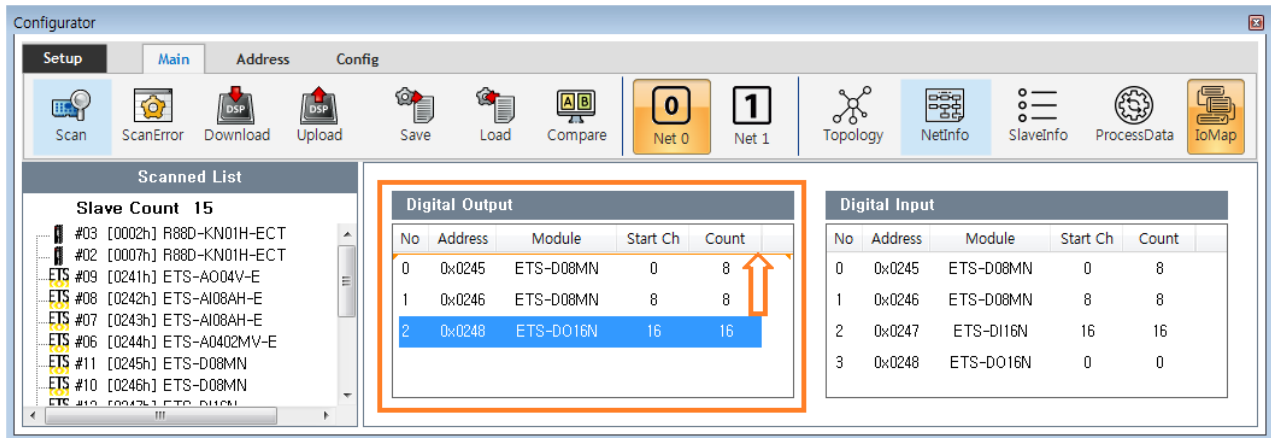

• Item Drag Map

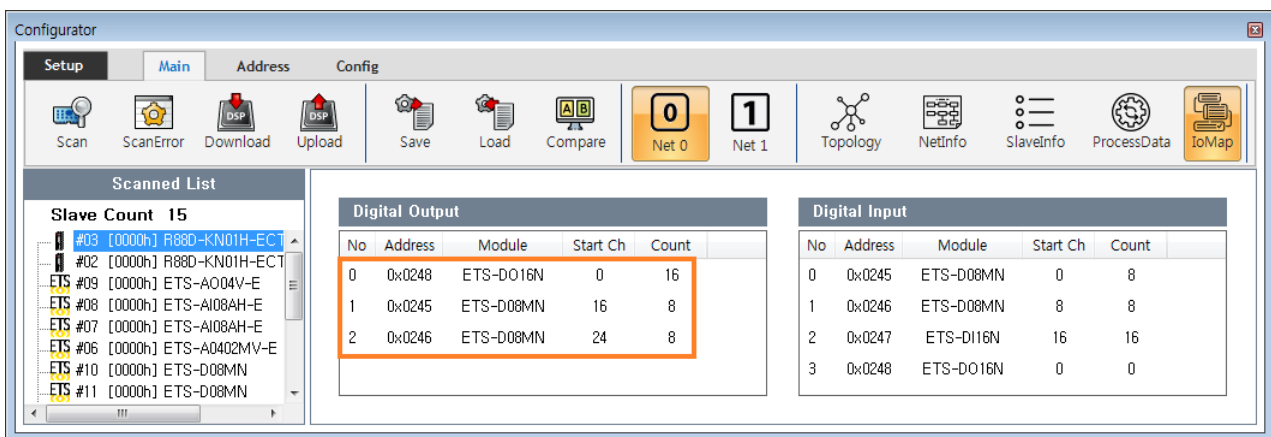


- Drop Map Channel

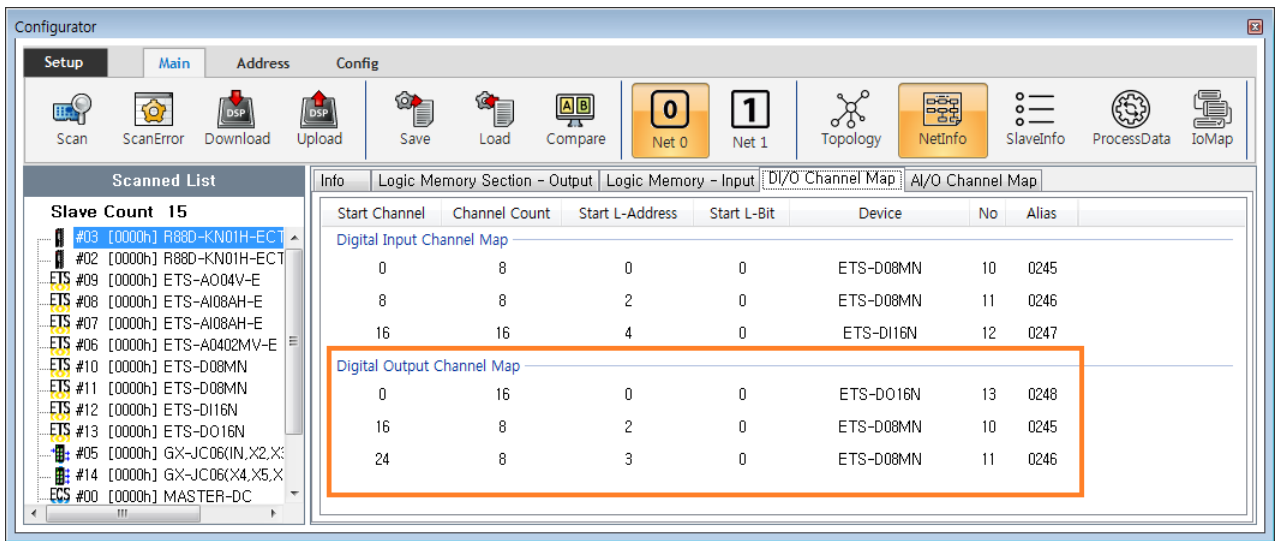

- Channel Map

Auto

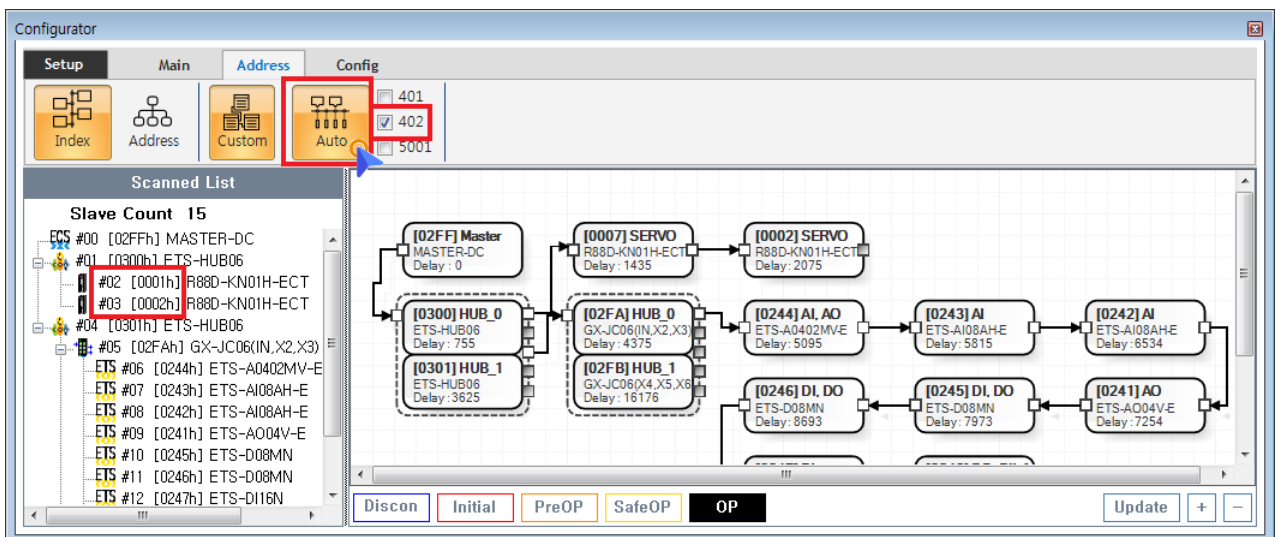

- Check ProfileType¹⁾
 - 401 Profile Driver Address가

- 1
- DeviceID Switch
- **Station Alias Selection**

1)

401 MocoController가 IO, 402 Driver, 5001

From:

<http://comizoa.com/info/> - -

Permanent link:

http://comizoa.com/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:50_addressing&rev=1586832000

Last update: **2024/07/08 18:22**