

Addressing 1
 Index 1
 Address 2
 Custom 2
 Auto 4


Addressing

× Slave Mapping




- Index : Mapping
- Address : Mapping
- Custom : User Define Mapping
- Auto : Device Type

Index

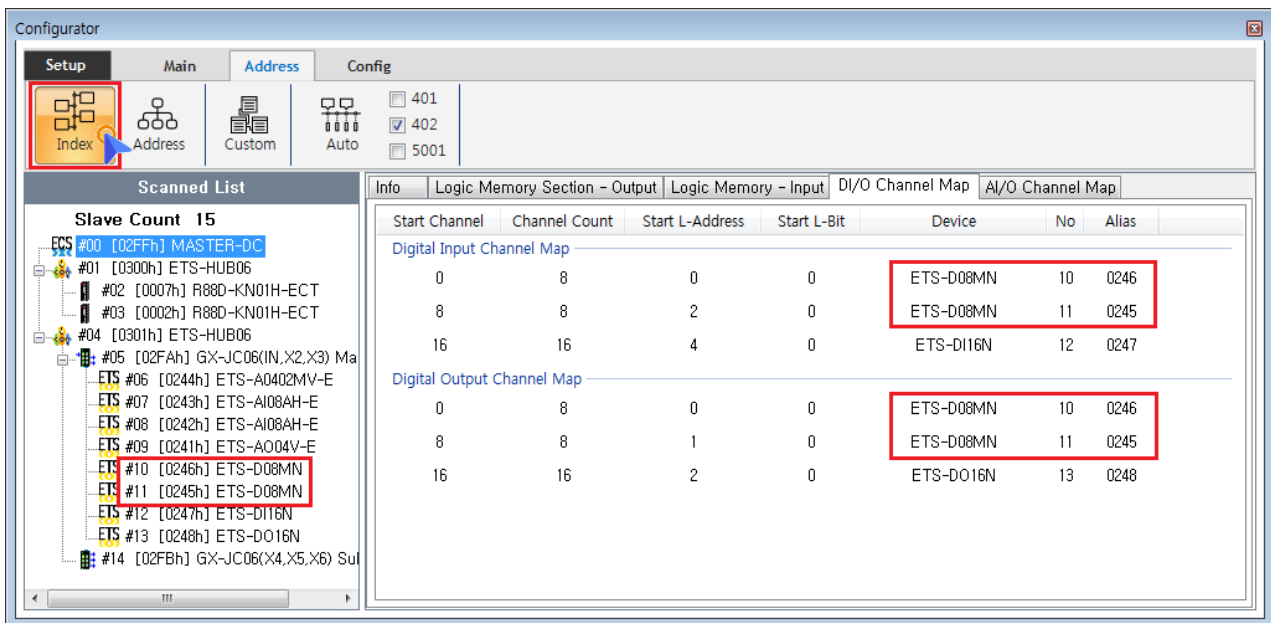

- Index 가
- IO
 - 10 ETS-D08MN (0x246) 0 ~ 7 Global Channel
 - 11 ETS-D08MN (0x245) 8 ~ 15 Global Channel

Address

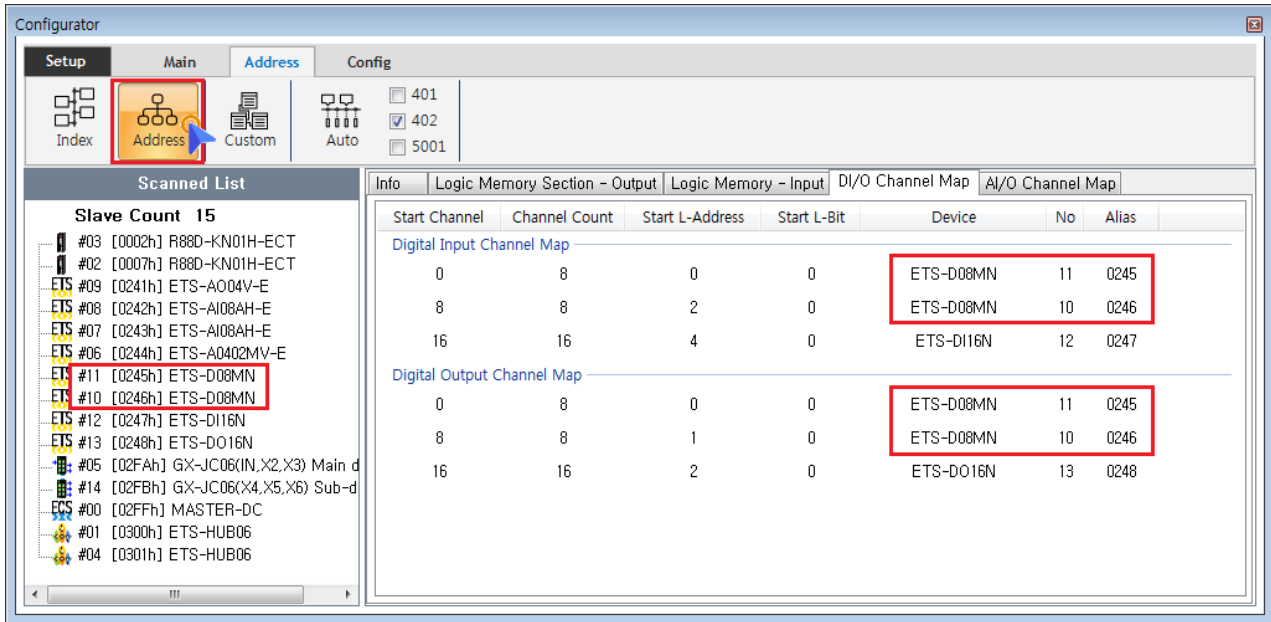


- **Address** 가 .
- IO ,
 - 0x245 가 ETS-D08MN 0 ~ 7 Global Channel
 - 0x246 가 ETS-D08MN 8 ~ 15 Global Channel


Custom




- **Custom** User Defined Map .

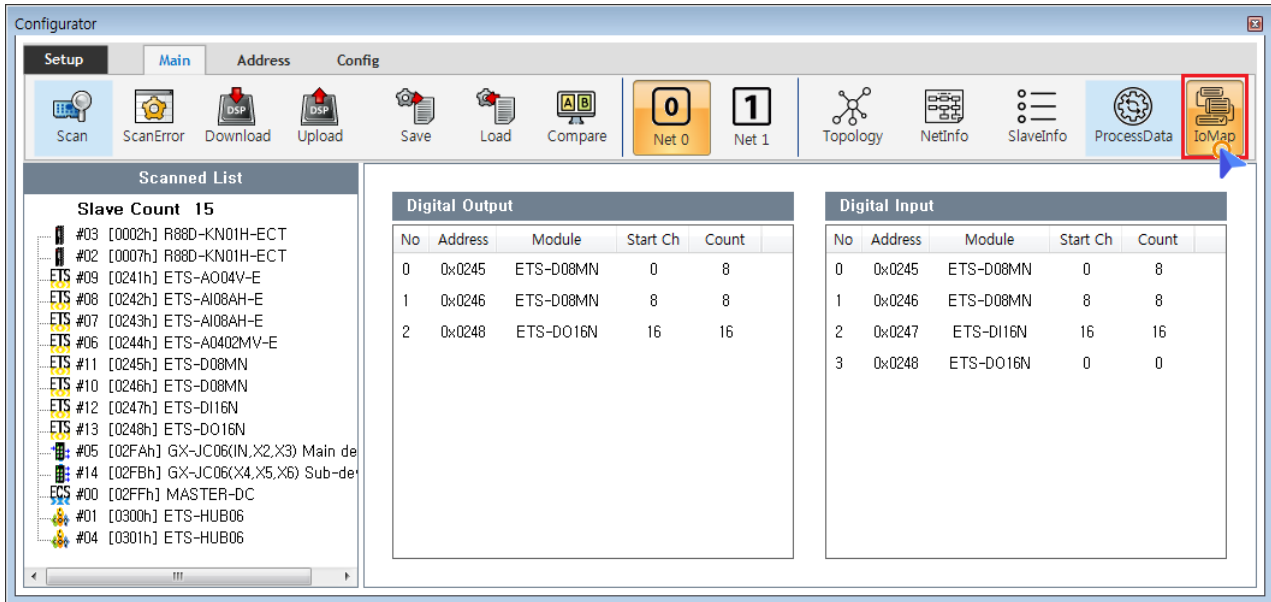


• Custom Main IoMap

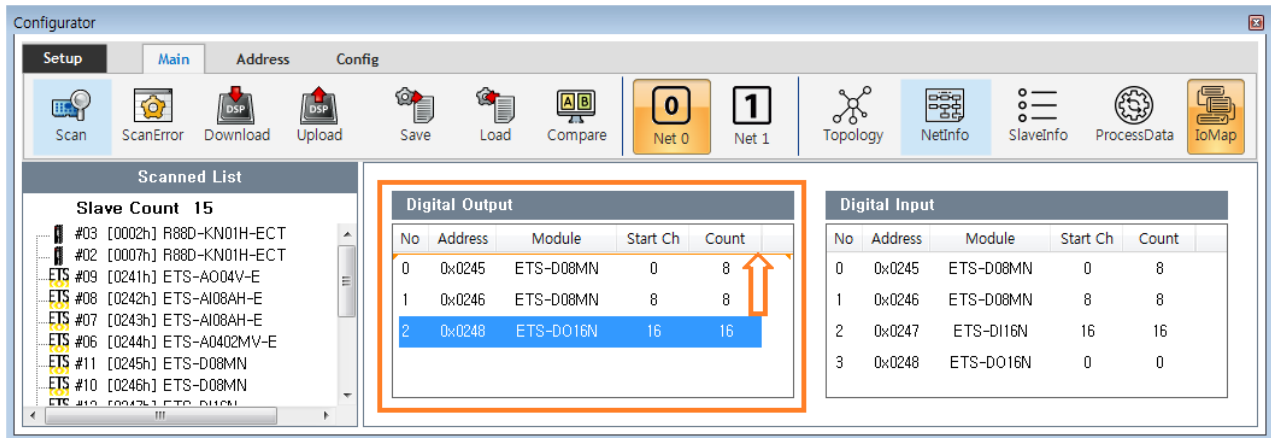

• Item Drag Map

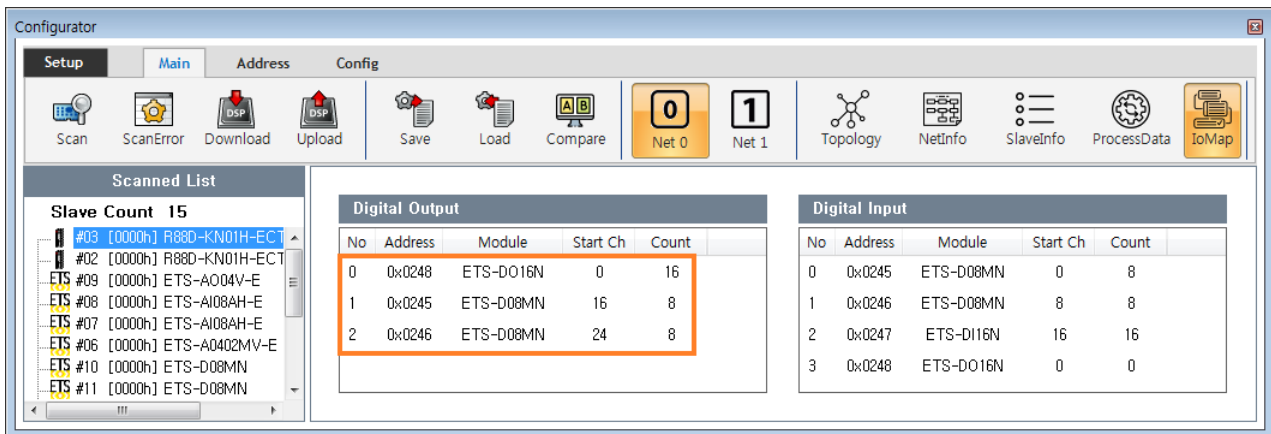


- Drop Map Channel

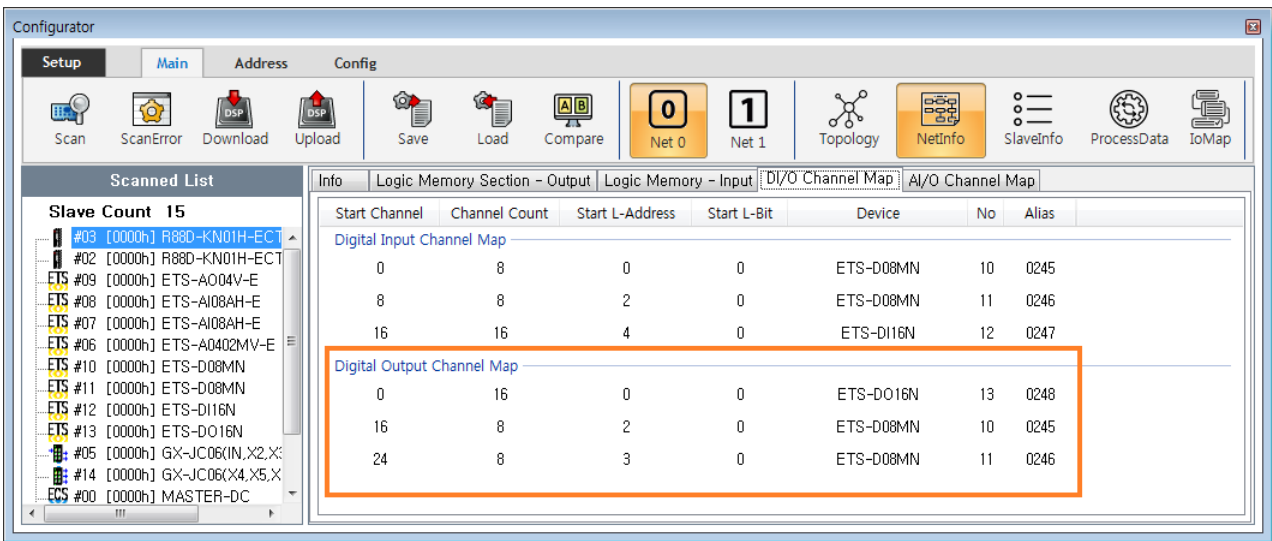

- Channel Map

Auto

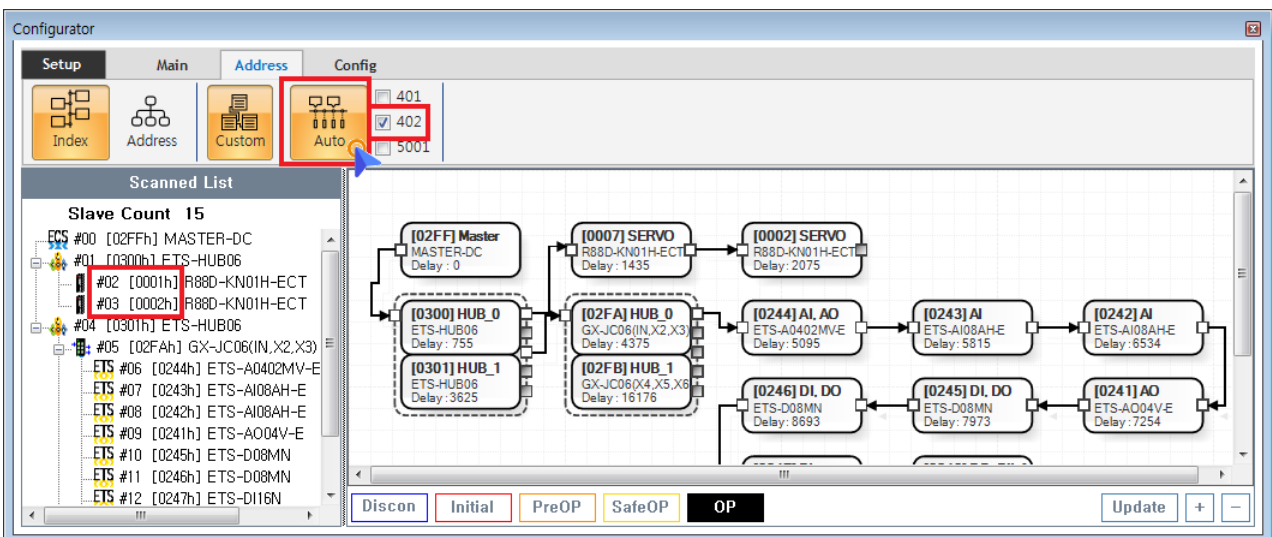

- Check ProfileType¹⁾
 - 401 Profile Driver Address가

- 1
- DeviceID Switch
- **Station Alias Selection**

1)

401 MocoController가 IO, 402 Driver, 5001

From:

<http://comizoa.com/info/> - -

Permanent link:

http://comizoa.com/info/doku.php?id=platform:ethercat:1_setup:10_config:20_desc:50_addressing&rev=1587032582

Last update: **2024/07/08 18:22**