

EEPROM Read / Write Failed 1
AL-Status Error 1

EEPROM Read / Write Failed

× Scan EEPROM Read Failed 가

AL-Status Error

- **SCAN Slave AIStatus가 Initial**
 - SCAN , Master Slave AIStatus Initial
 - Slave AIStatus가
 - AIStatus Error가 Slave¹⁾ AIStatus가

- **Slave AIStatus가 Initial , Master Initial**
 - Master OP , OP
 - AIStatus Error가

1)

Disconnect Init - PreOP

From: <http://comizoa.com/info/> - -

Permanent link: http://comizoa.com/info/doku.php?id=platform:ethercat:1_setup:10_config:ts:eprom_read_failed&rev=1607069543

Last update: 2024/07/08 18:22