
2025/11/06 07:06 1/1 EtherCAT State Machine

State Machine	1
Al Status	1

2025/11/06 07:06 1/2 EtherCAT State Machine

EtherCAT State Machine

× EtherCAT State Machine AL Status

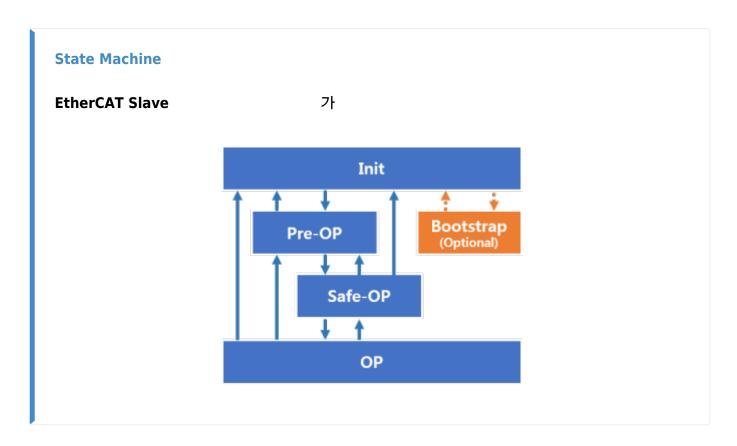

```
    BootStrap:

            FoE¹¹
            Init

    Init:

            Init:
            Pre-OP: MailBox
            Safe-OP: MailBox
            Slave

    OP: MailBox
    TX PDO
    TX Slave
    Status
    Data
    Data
```

• Slave (State Machine) Master . ∘ Master ESC AL Control Register .

2025/11/06 07:06 2/2 EtherCAT State Machine

Slave ESC AL Status Register

Slave AL StatusAL Status ErrorCode

• Slave AL Status가 OP가 , 가 . .

File access over EtherCAT

2)

Init → Bootstrap or BootStrap → Init

From:

http://comizoa.com/info/ - -

Permanent link:

http://comizoa.com/info/doku.php?id=platform:ethercat:2_info:10_alstatus&rev=1586256984

Last update: 2024/07/08 18:22