

EtherCAT State Machine 1
 State Machine 1
 AI Status 1

- Slave AL Status
 - AL Status ErrorCode
- Slave AL Status가 OP가 , 가
 - TX Slave(DI, AI) , SafeOP data
 - 가

1)

File access over EtherCAT

2)

Init → Bootstrap or BootStrap → Init

From:

<http://comizoa.com/info/> - -

Permanent link:

http://comizoa.com/info/doku.php?id=platform:ethercat:2_info:10_alstatus&rev=1587001502

Last update: **2024/07/08 18:22**