

.....	1
.....	1
Case 1	1
Case 2	2
Case 3	2
Case 4	2

x 가

(Cyclic Torque Mode) Target Torque 가 가

Case 1

- OutPDO Data Torque

- 1)

- OutPDO Data Torque 가 Configuration
 - Torque OutPDO Map

The screenshot shows the 'Configurator' software interface. The 'ProcessData' tab is selected and highlighted with a red box. The interface includes several tables and controls:

- Topology:** A tree view showing the device hierarchy: [0200h] MASTER-DC, [0001h] MADHT1505BA1 (selected), [0002h] MADHT1505BA1, and [0003h] MADHT1505BA1.
- Slave Info:** A table showing SyncManager parameters:

SM	Size	Type
0	256	MBoxOut
1	256	MBoxIn
2	19	Outputs
3	25	Inputs
- PDO List:** A table showing the mapping of PDOs:

Index	Size	Name	SM
0x1600	9	Receive PDO mapping 1	
0x1601	19	Receive PDO mapping 2	2
0x1602	15	Receive PDO mapping 3	
0x1603	21	Receive PDO mapping 4	
0x1A00	23	Transmit PDO mapping 1	
- PDO Assignment:** A table where the checkbox for index 0x1601 is checked and highlighted with a red box.

Index	Assignment
0x1600	<input type="checkbox"/>
0x1601	<input checked="" type="checkbox"/>
0x1602	<input type="checkbox"/>
0x1603	<input type="checkbox"/>
- PDO Content (0x1A00):** A table showing the content of the transmit PDOs:

Index	Size	Name	Type
0x6040:00	2	Controlword	UINT
0x6060:00	1	Modes of operation	SINT
0x6071:00	2	Target torque	INT
0x607A:00	4	Target position	DINT

- Config

Configuration Guide

- XML

. (OMRON xml)

- Torque Monitor가

Torque Monitor Failed

Case 2

-

- SDO 0x6080 (Max motor speed) 0 ²⁾

- SDO 0x6080 (Max motor speed)

- rpm

Case 3

-

- Pr0.00 0

-

- (Polarity) ³⁾ , 0x607E

- Pr0.00 0

Case 4

-

- Pr0.08 0
- **PANASONIC :**
- Pr0.08 0

1)

OutPDO Data

2)

Omron 0x607F (Max Profile Speed)

3)

No Reverse : 0 / Reverse : 224

From:

<http://comizoa.com/info/> - -

Permanent link:

http://comizoa.com/info/doku.php?id=platform:ethercat:70_users_guide:20_ts:torque_failed&rev=1624434260

Last update: **2024/07/08 18:22**