

Case 1 ..... 1  
Cause ..... 1  
Solution ..... 1

× Torque가 0

### Case 1

#### Cause

- InPDO Data Torque
- [1\)](#)

#### Solution

- InPDO Data Torque Configuration
  - Torque PDO Map

The screenshot shows the 'Configurator' software interface with the 'ProcessData' tab selected. The interface includes a toolbar with 'Scan', 'Download', 'Upload', 'Save', 'Load', and 'Close' buttons. Below the toolbar are several panels:

- Topology:** A tree view showing device addresses and names, including [0200h] MASTER-DC and several [0005h] MADHT1505BA1 devices.
- Slave Info:** A table for SyncManager with columns SM, Size, and Type. The row for SM 3, Size 25, Type Inputs is highlighted with a red box.
- PDO List:** A table listing PDO mappings with columns Index, Size, Name, and SM. The row for Index 0x1A01, Size 25, Name Transmit PDO mapping 2, SM 3 is highlighted with a red box.
- PDO Assignment:** A table with checkboxes for PDO indices 0x1A00, 0x1A01, 0x1A02, and 0x1A03. The checkbox for 0x1A01 is checked and highlighted with a red box.
- PDO Content (0x1A00):** A table listing PDO content with columns Index, Size, Name, and Type. The row for Index 0x6077:00, Size 2, Name Torque actual value, Type INT is highlighted with a red box.

At the bottom, there are 'Index' and 'Addr' buttons, and a checkbox for 'Apply AutoAddress To Servo'.

- Config [Configuration Guide](#)

1)

## InPDO Data

From:

<http://comizoa.com/info/> - -

Permanent link:

[http://comizoa.com/info/doku.php?id=platform:ethercat:70\\_users\\_guide:20\\_ts:torque\\_monitor\\_failed&rev=1586648784](http://comizoa.com/info/doku.php?id=platform:ethercat:70_users_guide:20_ts:torque_monitor_failed&rev=1586648784)

Last update: **2024/07/08 18:22**