

- EtherCAT 1
- Intro 1
- Setup 1
- Device Install** 2
- Software Install** 2
- Connect Check** 2
- Config** 3
- Test** 3
- Trouble Shooting 3
- Support 3

EtherCAT Type

EtherCAT

Intro

EtherCAT

EtherCAT

- [EtherCAT](#)
- [EtherCAT Type](#)
-

EtherCAT Info

- [Object Dictionary, PDO, SDO](#)
- [ESI File](#)
- [\(Sync mode\)](#)

COMIZOA EtherCAT Hardware Master

- [Comizoa EtherCAT Hardware Master](#)
- [Comizoa EtherCAT Devices](#)
- [Comizoa EtherCAT](#)
- [Comizoa EtherCAT](#)
- [Comizoa EtherCAT](#)
- [Comizoa EtherCAT](#)

Setup

× [EtherCAT Setup](#) [Quick Guide](#) .

Device Install

- , **DeviceID** .
- Device **PCI Slot** .
- Hardware 2.10 , **12V** .
- PC Device LED .
- LED .

Software Install

- Setup (**Download**) Setup .
- Setup 가 .
 - **Driver**
 - **Driver가**
 - **Driver**
 - **DLL**
- ComilDE **Device Load** .
- ComilDE , **SW Version** .
 - ComilDE , **ComiTray** **SW Version**

Connect Check

- Cat.5e STP¹⁾ .
- .

Config

- **Configuration**
- Slave **AI-State가 OP가**

Test

- **ComiIDE**
- Motion Test **Motion Test**

Trouble Shooting

Support

1)
Shielded Twisted-Pair CAT 5e

From:
<http://comizoa.com/info/> - -

Permanent link:
<http://comizoa.com/info/doku.php?id=platform:ethercat:start&rev=1560403159>

Last update: **2024/07/08 18:22**