

NEMO Master Board 1

NEMO Master Board 1

..... 2

..... 3

NEMO


× NEMO

NEMO Master Board

NEMO Master Board


(NemoFWU.exe)

- 1. - Firmware - NemoFWU.exe
- 2. RT(LX520), ML2(LX530S), ML3(LX530), SS3(LX540/H)

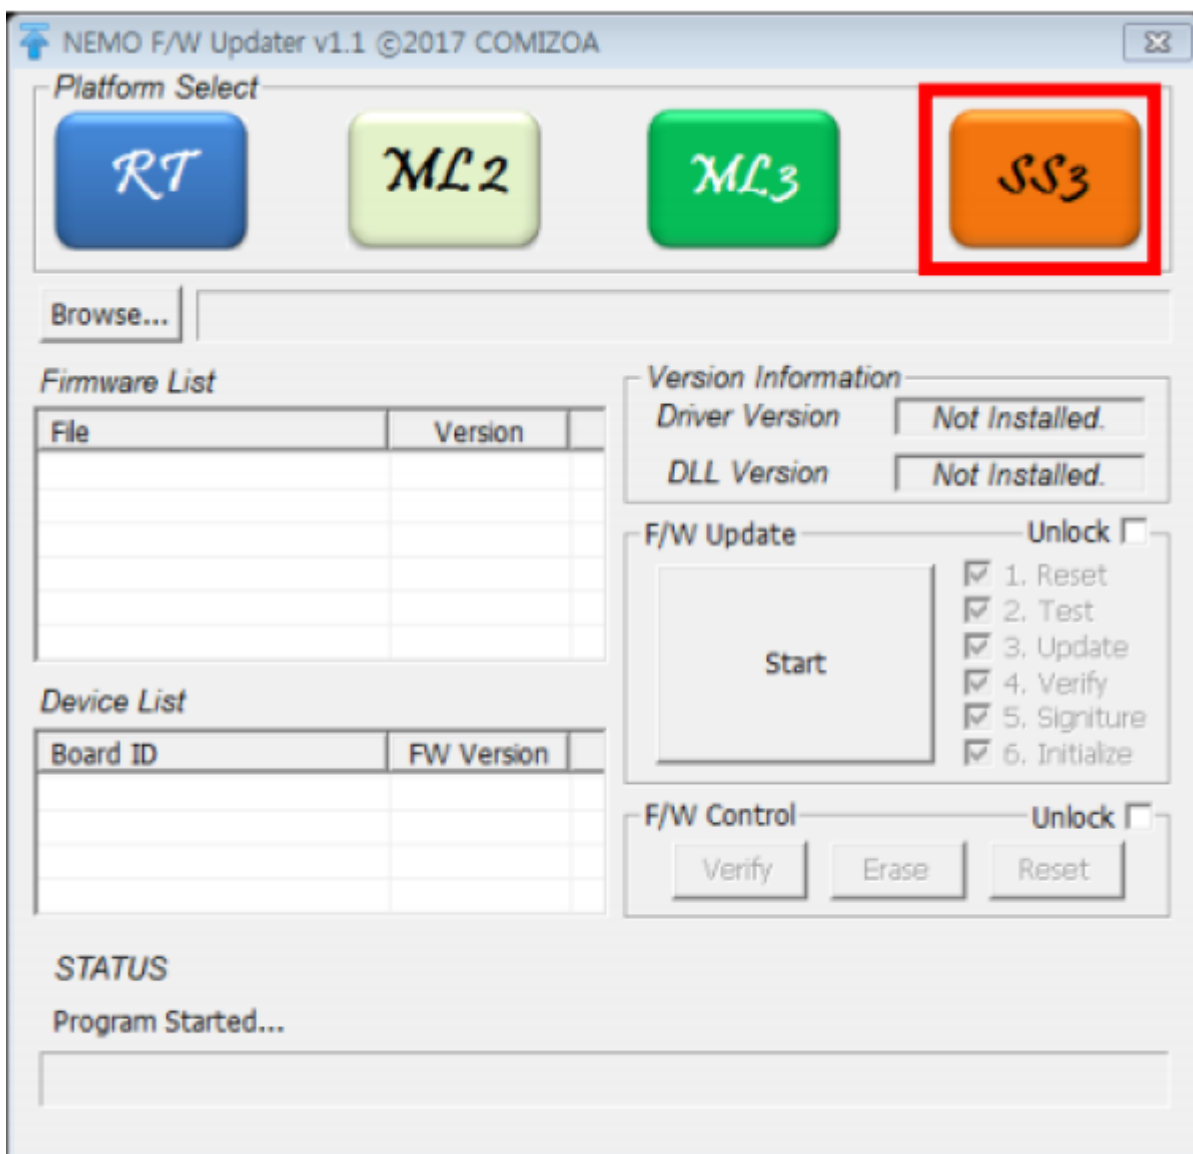



- 가 DLL

- Firmware DLL

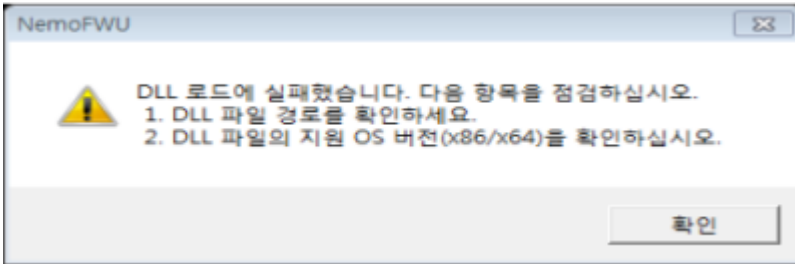

- Browse .dat

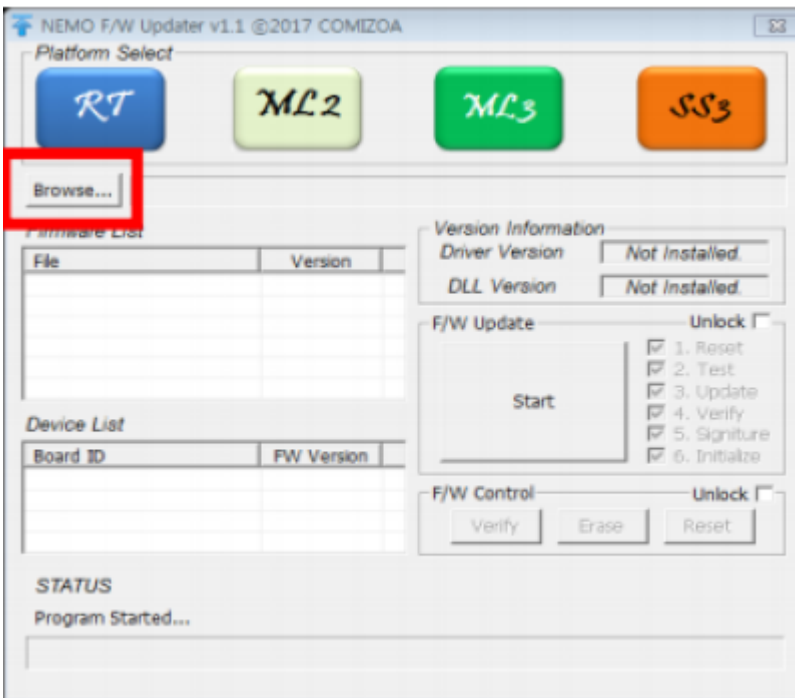

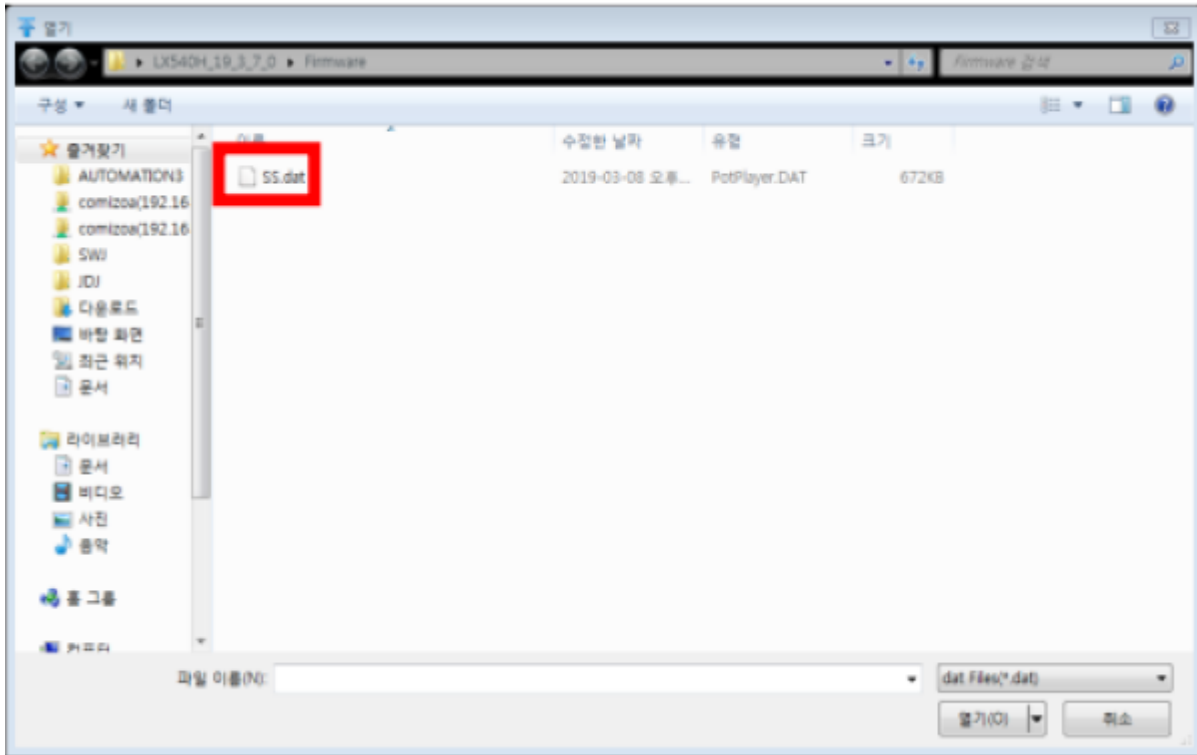

- Start

NEMO F/W Updater v1.1 ©2017 COMIZOA

Platform Select

RT ML2 ML3 SS3

Browse... C:\Users\Administrator\Desktop\LX540H_19_3_7_0\Firmware\SS.dat

File	Version
C:\Users\Administrator...	19.3.7.0

Board ID	FW Version
0	19.3.7.0

Version Information

Driver Version 19.3.7.0

DLL Version 19.3.7.0

F/W Update

Start

Unlock

- 1. Reset
- 2. Test
- 3. Update
- 4. Verify
- 5. Signiture
- 6. Initialize

F/W Control

Verify Erase Reset

Unlock

STATUS

Program Started...

From: <http://comizoa.com/info/> - -

Permanent link: http://comizoa.com/info/doku.php?id=practice:nemo_%ED%8E%8C%EC%9B%A8%EC%96%B4_%EC%97%85%EB%8D%B0%EC%9D%B4%ED%8A%B8&rev=1625625530

Last update: 2024/07/08 18:23