

..... 1

1. Configurator Download Dictionary 1

2. SDO Torque Limit 1

× (Torque Limit)

[]

1. Configurator Download Dictionary

The screenshot shows the ComilIDE (v1.6.4.0) interface. The 'Configurator' window is open, displaying a network diagram with a '02FF Master' and a '0005 Servo'. The 'Dictionary' icon in the top toolbar is highlighted with a red box. Below the screenshot, a list of actions is provided:

- Config → Download Main Dictionary

2. SDO Torque Limit

The screenshot displays the ComiIDE interface with the Object Dictionary for EtherCAT. The parameter 0x60E0, 'Positive Torque Limit Value', is highlighted in red. The LogView window shows the following error messages:


Time	Channel	Code	Command	Info
13:05:31.691	EtherCAT	-183	ecSlv_ReadCoe...	ecERR_IMPROPER_AL_STATE (AL-STATE가 적절하지 않은 경우) (netID = 0, slaveP...
13:05:31.691	EtherCAT	-183	ecSlv_ReadCoe...	ecERR_IMPROPER_AL_STATE (AL-STATE가 적절하지 않은 경우) (netID = 0, slaveP...
13:05:31.692	EtherCAT	-183	ecSlv_ReadCoe...	ecERR_IMPROPER_AL_STATE (AL-STATE가 적절하지 않은 경우) (netID = 0, slaveP...
13:05:31.692	EtherCAT	-183	ecSlv_ReadCoe...	ecERR_IMPROPER_AL_STATE (AL-STATE가 적절하지 않은 경우) (netID = 0, slaveP...
13:05:31.692	EtherCAT	-183	ecSlv_ReadCoe...	ecERR_IMPROPER_AL_STATE (AL-STATE가 적절하지 않은 경우) (netID = 0, slaveP...

- SDO Torque Limit

The screenshot displays the ComiIDE interface with the Object Dictionary for EtherCAT. The parameter 0x60E1, 'Negative Torque Limit Value', is highlighted in blue. The LogView window shows the following error messages:

Time	Channel	Code	Command	Info
13:06:32.775	EtherCAT	-183	ecSlv_ReadCoe...	ecERR_IMPROPER_AL_STATE (AL-STATE가 적절하지 않은 경우) (netID = 0, slaveP...
13:06:32.775	EtherCAT	-183	ecSlv_ReadCoe...	ecERR_IMPROPER_AL_STATE (AL-STATE가 적절하지 않은 경우) (netID = 0, slaveP...
13:06:32.775	EtherCAT	-183	ecSlv_ReadCoe...	ecERR_IMPROPER_AL_STATE (AL-STATE가 적절하지 않은 경우) (netID = 0, slaveP...
13:06:32.775	EtherCAT	-183	ecSlv_ReadCoe...	ecERR_IMPROPER_AL_STATE (AL-STATE가 적절하지 않은 경우) (netID = 0, slaveP...
13:06:32.775	EtherCAT	-183	ecSlv_ReadCoe...	ecERR_IMPROPER_AL_STATE (AL-STATE가 적절하지 않은 경우) (netID = 0, slaveP...

1. Value .
2. Value enter.

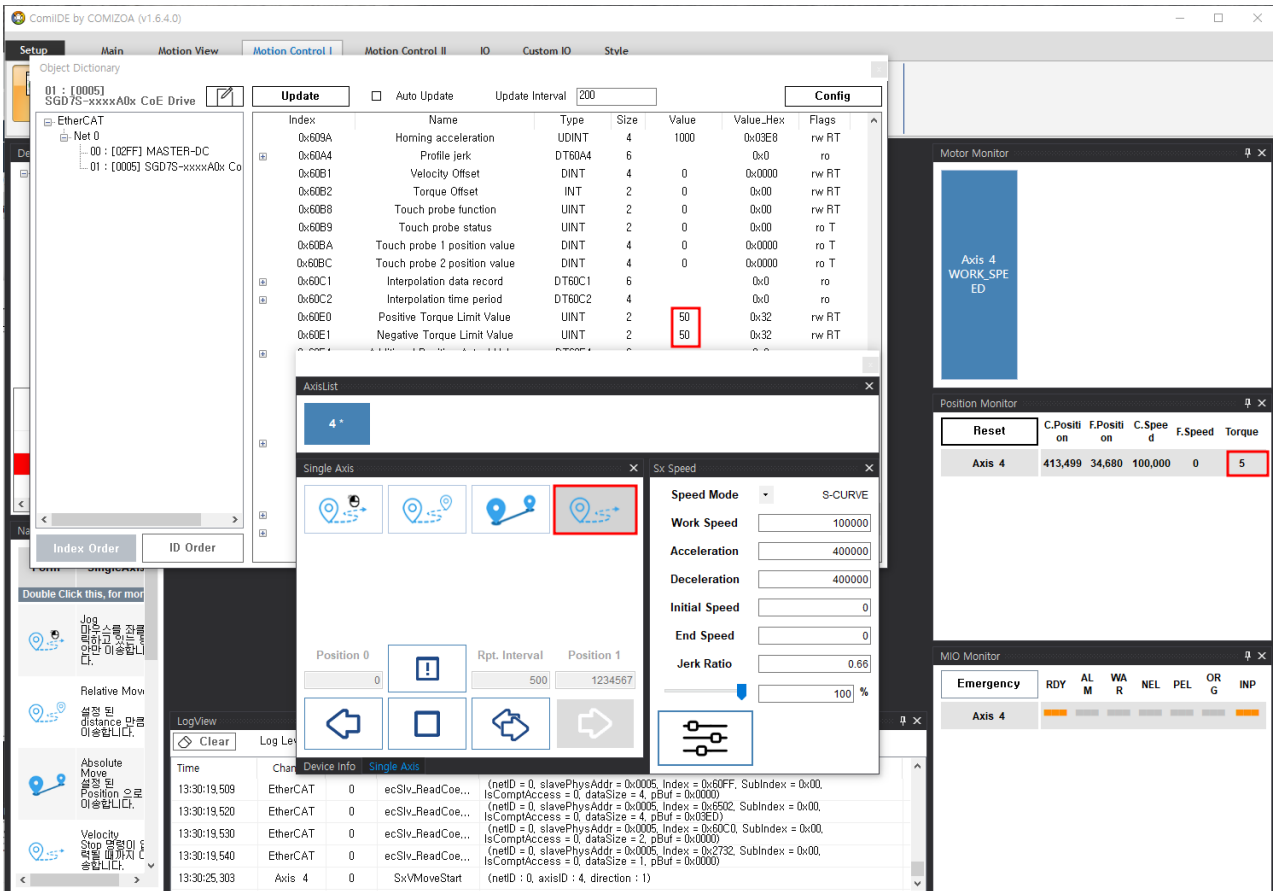

* V 가 Limit

* Torque Limit . (Ex: Torque Limit = Maximum Current)

From: <http://comizoa.com/info/> - -

Permanent link: http://comizoa.com/info/doku.php?id=faq:motion:ethercat:07_torque_limit_setup&rev=1659507476

Last update: 2024/07/08 18:22