

..... 1

..... 1

..... 2


..... 4


Gantry Teaching

x

- Master Slave , Step Distance MicroStep Distance
- Gantry Step Distance , MicroStep , 가 가
- 가 Master Slave 가
- Step Count table
- Table , Master-Slave Master , Slave 가
- Table
 - (1000, 990), (2000, 994) , 가 1500 , Slave 992

- ComilDE Gantry Gantry Teaching

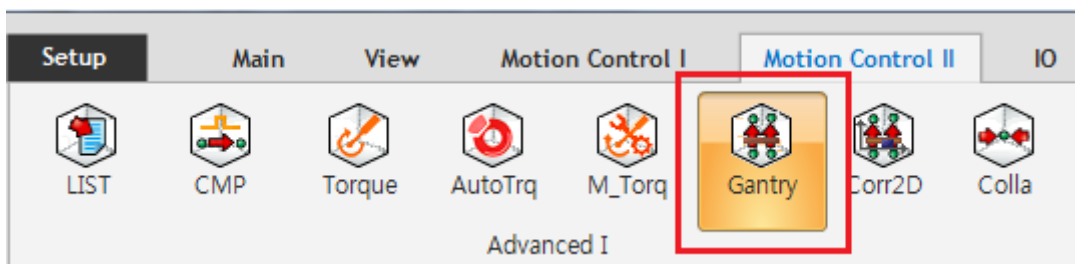

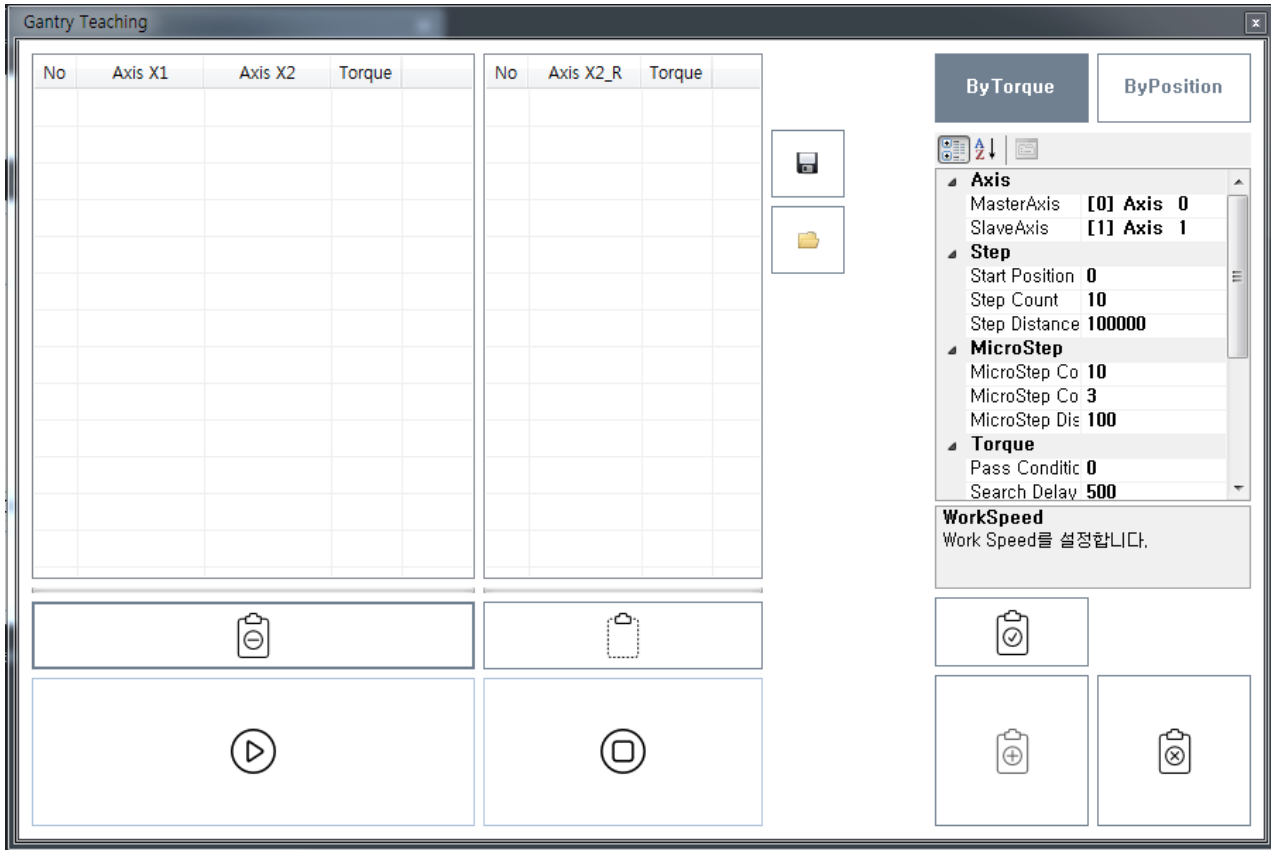

Axis

- Master Axis : Gantry Master
- SlaveAxis : Gantry Slave

Step

- Start Position : Teaching
 - Start Position 0
- Step Count, Step Distance :
 - Step Count , Step Distance ,
 - StepCount * StepDistance 가 ,
 - , Step Count = 10, Step Distance = 100 , 1,000

MicroStep

- MicroStep Count :
 - + / - MicroStep Count ,
 - MicroStep Count , Step

- MicroStep CountLimit : MicroStep Torque가 CountLimit 가
 - , CountLimit = 3 1,2,3 1.2, 2.1, 2.5 ,
 - , + -
- MicroStep Distance : MicroStep
 - 가

Torque

- Pass Condition : Pass Condition Step 가 ,
- Search Delay : Micro Step Delay ,
- Torque Limit :
- Torque Warning : Warning

The screenshot shows the Gantry Teaching software interface. It features two data tables and a configuration panel on the right.

No	Axis 0	Axis 1	Torque
0	0	-300	1
1	20000	19800	0,8
2	40000	39800	0,2
3	60000	59800	0,6
4	80000	79900	1,6
5	100000	99900	1,1
6	120000	119900	1,1
7	140000	139900	1
8	160000	159900	0,8
9	180000	179900	0,3
10	200000	199900	2

No	Axis 1	Torque
0	0	13,7
1	100	36,9
2	200	40,8
3	300	45
4	-100	6
5	-200	2,4
6	-300	1
7	-400	5
8	-500	7,3
9	-600	9,8


Configuration Panel (ByTorque / ByPosition):

- Step: Start Position 0, Step Count 10, Step Distance 20000
- MicroStep: MicroStep Count 10, MicroStep CountLim 3, MicroStep Distance 100
- Torque: Pass Condition 0, Search Delay 500, Torque Limit 60, Torque Warning 40
- Speed: Torque Warning 토크 확인시 경고 레벨을 설정합니다.

Speed

- Teaching

- ApplySetup

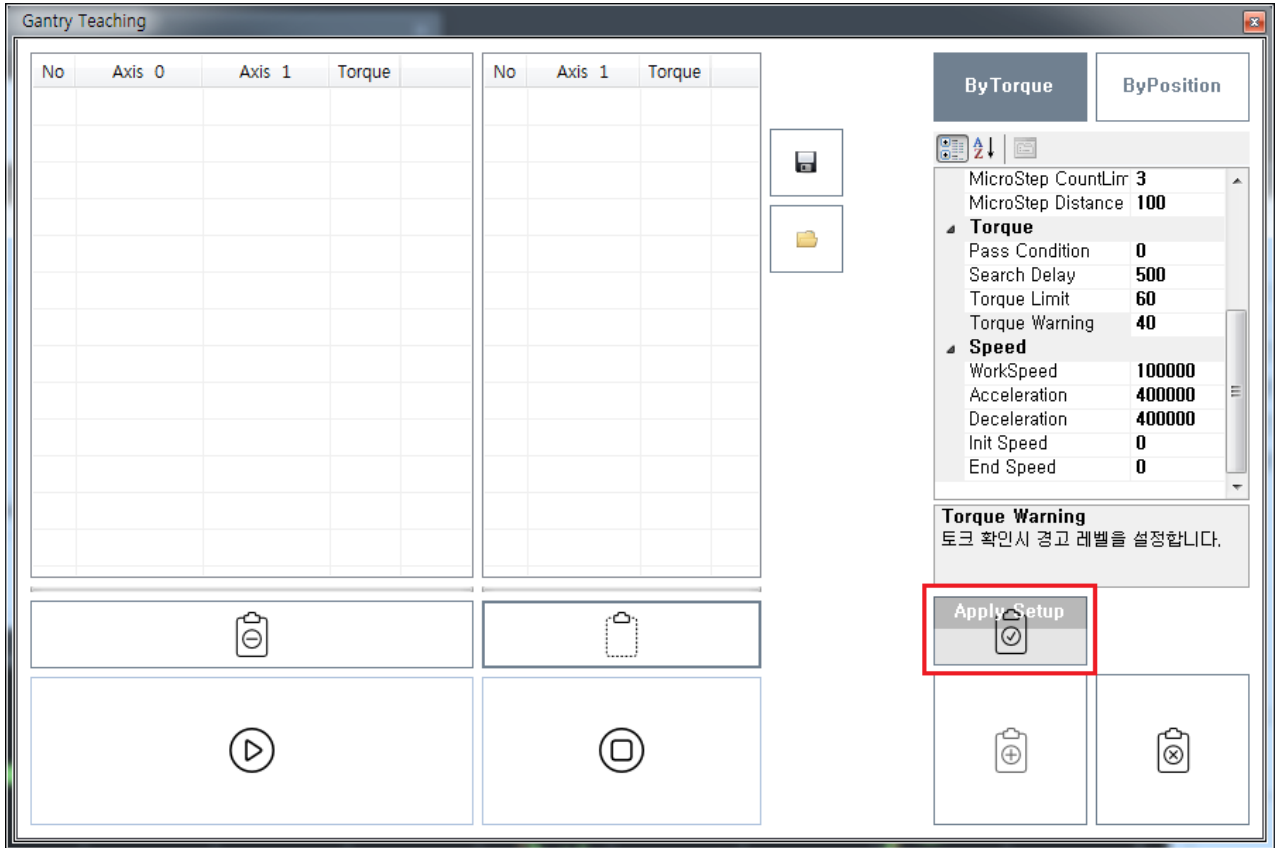

- Start Teaching

The screenshot shows the Gantry Teaching software interface. On the left, there are two tables for teaching data. The first table has columns 'No', 'Axis 0', and 'Torque'. The second table has columns 'No', 'Axis 1', and 'Torque'. A red box highlights the 'Start' button, which is a play icon. To the right, there are control panels for 'ByTorque' and 'ByPosition', a parameter list for MicroStep Co 3, and a Torque Warning section with a Korean message: '토크 확인시 경고 레벨을 설정합니다.'

No	Axis 0	Axis 1	Torque
0	0		
1	20000		
2	40000		
3	60000		
4	80000		
5	100000		
6	120000		
7	140000		
8	160000		
9	180000		
10	200000		

No	Axis 1	Torque

• Teaching

Teaching

The screenshot shows the Gantry Teaching software interface after a teaching step. The first table now has data for rows 0 through 10. The second table has data for rows 0 through 5. Row 6 in the first table is highlighted in blue. The 'Start' button is no longer highlighted. The parameter list and Torque Warning section remain the same.

No	Axis 0	Axis 1	Torque
0	0	-300	0,9
1	20000	19800	0,6
2	40000	39800	0,8
3	60000	59800	0,5
4	80000	79900	1,1
5	100000	99900	1,6
6	120000	119900	0,6
7	140000		
8	160000		
9	180000		
10	200000		

No	Axis 1	Torque
0	140000	15,8
1	140100	23
2	140200	29
3	140300	35,1
4	139900	0,3
5	139800	2,7

- Teaching Register To Axis

The screenshot shows the 'Gantry Teaching' software window. It features two data tables, a parameter settings panel on the right, and a control area at the bottom. The 'Register To Axis' button is highlighted with a red box.

No	Axis 0	Axis 1	Torque
0	0	-300	0,9
1	20000	19800	0,6
2	40000	39800	0,8
3	60000	59800	0,5
4	80000	79900	1,1
5	100000	99900	1,6
6	120000	119900	0,6
7	140000	139900	0,3
8	160000	159900	0,1
9	180000	179900	0,8
10	200000	199900	2,1

No	Axis 1	Torque
0	20000	21,1
1	20100	28,5
2	20200	34,5
3	20300	40
4	19900	4,1
5	19800	0,6
6	19700	2,3
7	19600	6
8	19500	8,7

Parameter Settings Panel:

- ByTorque | ByPosition
- MicroStep Co: 3
- MicroStep Dis: 100
- Torque**
 - Pass Conditic: 0
 - Search Delay: 500
 - Torque Limit: 60
 - Torque Warni: 40
- Speed**
 - WorkSpeed: 100000
 - Acceleration: 400000
 - Deceleration: 400000
 - Init Speed: 0
 - End Speed: 0
- Torque Warning: 토크 확인시 경고 레벨을 설정합니다.

Control Area:

- Clipboard icon
- Play button
- Stop button
- Register To Axis button (highlighted with a red box)
- Clipboard icon

- , Master-Slave

The screenshot shows the 'Motor Monitor' software window with three status indicators:

- Axis 0 ON
- Axis 1 SLAVE_MODE
- Axis 2 OFF

From:
<http://comizoa.com/info/> - -

Permanent link:
http://comizoa.com/info/doku.php?id=application:comiide:tool:gantry:20_gantry_teaching&rev=1542947405

Last update: **2024/07/08 18:23**